

DUCK HUNTER TIPS

- Duck must be in the OFF position in order to charge. Even though the Duck will appear to be off after 3 hits - it will still be in the ON position. Turn the duck and proceed to charging.
- Make sure the charging rod atop the blaster is securely inserted into the duck for charging. The rod will click into place when inserted properly. Note that just having the duck rest on the charging rod will not allow it to charge and the duck will not fly.
- Once the duck is securely placed on the charge rod, the trigger on the controller must be pressed for about 10 seconds to give the Duck a full charge. A green LED will light up on the blaster during charging. If the green LED does not light up, make sure the Duck is turned off.